

General Operating Instructions

1. Connect fresh water supply, then open the Fresh Water Supply valve. Valve is located on exterior of the trailer.
2. Open all Valves to toilets, urinals, and faucets:
 - a. Toilet valves are located behind toilets.
 - b. Urinal valves are located behind access panel, below urinals.
 - c. Faucet valves are located in the cabinet below the sink.
3. Ensure all winterization valves and waste tank termination valves are closed.
4. Connect power and check that breakers and switches are in the correct position for operation.
5. Add 1 inch of fresh water to waste tank to charge tank and to allow paper and solids to dissolve. Single ply quick dissolving toilet tissue is recommended. We recommend not using double ply tissue or high cloth content tissue, as they do not dissolve adequately.
6. Odor Control:
 - a. **DO NOT USE** – any products containing formaldehyde.
 - b. **DO USE** – Rid-X to help dissolve solids and add freshening products such as Pine-Sol to the waste tank.

Winterization Instructions

1. To drain water from plumbing lines: (If air is available connect to fresh water supply)
 - a. Open all winterization drain valves located exterior of trailer.
 - b. Operate all toilets, urinals, and faucets.
2. When water has been drained from system, close winterization drain valves.
3. Connect anti-freeze to fresh water connection. (A small 12v pump is needed to pump antifreeze through the system.)
4. Use RV style non-toxic antifreeze only.
5. Open fresh water valve.
6. Operate all toilets, urinals, and faucets to provide antifreeze for traps and drain lines.
7. Open winterization drain valves until anti-freeze flows out then close valves.
8. Ensure waste tank has been serviced.